



GTR120

Wireless Keypad

Instruction Manual

Please note: This product is compatible with **GTR058**, **GTR099**, **GTR062**, **GTR078** swing gate motors.

How to pair the keypad to your gate opener:

1. Press button 'LEARN' on Control Panel of Gate Opener on the Gate #1 until the LED on the control board lights up.

Please note: the learn button must be released as soon as the LED on the control board lights up. If the button is held for too long it will erase all remotes paired to the gate opener.

2. Press the "OK" button twice.

3. The "LEARN" LED will start to flash and then turn off;

4. The keypad has now been paired.

5. To open the gate, Press "PIN", Input password (default password is "888888") and press the "OK" button

6. You can press the "OK" button at any time to stop the gate moving.

How to change the default password:

1. Press and release the "PIN" button

2. Enter the 6-digit default entry code (factory default code is "888888")

3. Press and release the "PIN" button.

4. Enter your new 6-digit code and press "PIN" to store it.

5. The entry code should now be stored.

GTR120 Fitting Instructions

Tools Required

- Small flat blade screwdriver
- 2.5mm Allen Key
- Phillips Head Screwdriver
- Recessed Screws
- Drill

Remove the GTR120 from the box



Using a small flat blade screwdriver, remove the blue front panel from the keypad.



Using an Allen Key, remove the 2 screws located either side of the panel.



After screws are removed, lift the housing. The rear plate should drop away.



The backing plate and surround can be mounted together with any of the 7 recessed areas. Drill holes in your preferred mounting holes. (Screws not supplied or shown in image)



Once the base plate and surround is mounted you can replace the main body. Then replace the 2 screws.



Once this is done, the blue face plate can be put back into position.

